



Remote shell replacement instructions

Tools required:

- *Cleaning cloth/wipe*
 - *small brush*
 - *Methylated spirits or similar cleaning alcohol*
 - *Small screwdriver set.*
1. *Apply a small amount of methylated spirits to your cleaning cloth and clean any dirt or dust on remote.*
 2. *Remove any retaining screw(s) usually on the back of the remote shell using a screwdriver.*
 3. *Look for any notch or cut out in the housing and using a small flat screwdriver gently pry the shell open.*
 4. *Gently lift the circuit board out of the shell noting how it was located.*
 5. *Using a small brush remove any dust on the circuit board, also replace the battery if necessary.*
 6. *Take your new map shell and fit buttons to shell, where applicable.*
 7. *Refit the circuit board to the new shell paying attention to how it is located.*
 8. *Clip the two parts of the shell together and refit any retaining screws.*
 9. *Test the remote buttons paying attention to any led lights that may illuminate indicating the remote is functional. Depress the remote next to the vehicle and confirm remote locks/unlocks doors/boot.*