

MAP

KEYS & REMOTES



MAZDA KEY & REMOTE PROGRAMMING



NOTE: Remote programming can be performed before the key blank is cut. The transponder must be programmed using a scan tool & requires the key to be cut. All remote must be present when performing this procedure. Any remotes that are not re-introduced will no longer function.

Stage 1 – Remote Programming – The following procedure allows the remote control to lock and unlock the doors of the vehicle.

1. Sit in vehicle & open driver's door (all other doors & boot closed).
2. Insert original key in to the vehicle's ignition & turn from On to Lock 3 times leaving the key in the ignition (Lock position) after the final turn.
3. Close and open the driver's door 3 times, leaving the door ajar.
If performed correctly the door locks will sequence. You are now in Learn Mode.
4. Press the Lock button on the new remote twice. *The door locks will sequence when accepted.*
5. Press the Lock button on all previous remotes twice. *The door locks will sequence when accepted.*
6. Turn the key to the On position followed by the Lock position and remove the key to exit Learn Mode.

Tip: *If you cannot get the vehicle to go in to Learn Mode after step 3: Sit in the vehicle with the driver's door open and leave the key in the vehicle's ignition. It should beep at you to indicate that the key has been left in the ignition. If it does not, change Step 2 to 'On to Accessories leaving the key in the accessories position after the final turn'.*

Stage 2 – Key Programming – The transponder for these vehicles must be programmed using a scan tool.